

NIKKOR


AF-S Fisheye NIKKOR 8-15mm f/3.5-4.5E ED

EN User's Manual (with Warranty)
DE Benutzerhandbuch (inkl. Garantiebeleg)
FR Manuel d'utilisation (avec garantie)
NL Gebruikshandleiding (met garantie)



Printed in Thailand
 7MA04445-06

NIKON CORPORATION

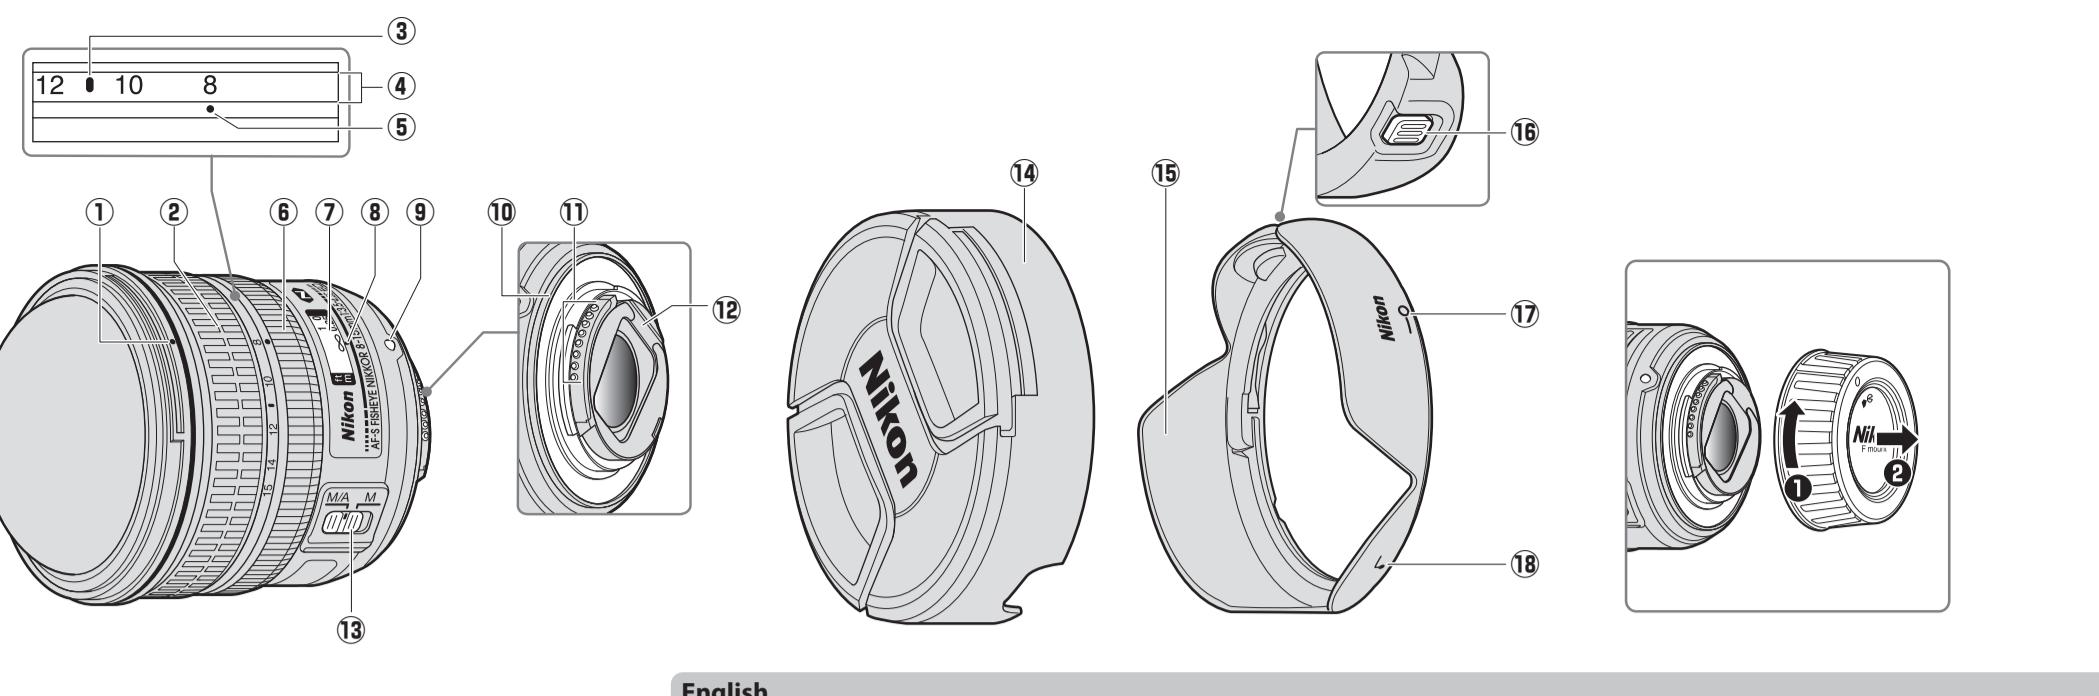

English


Note:

Before using this product, please carefully read both these instructions and the camera manual.

Principal Features

This fisheye lens is for use exclusively with cameras featuring electronic aperture control. With FX-format cameras, its angle of view is 180° vertical and horizontal (circular fisheye) when zoomed all the way out and 180° diagonal (full-frame fisheye) when zoomed close to the all the way in. It employs an equi-angled mapping function.

The image circle is smallest when the lens is zoomed all the way out and largest when the lens is zoomed all the way in.

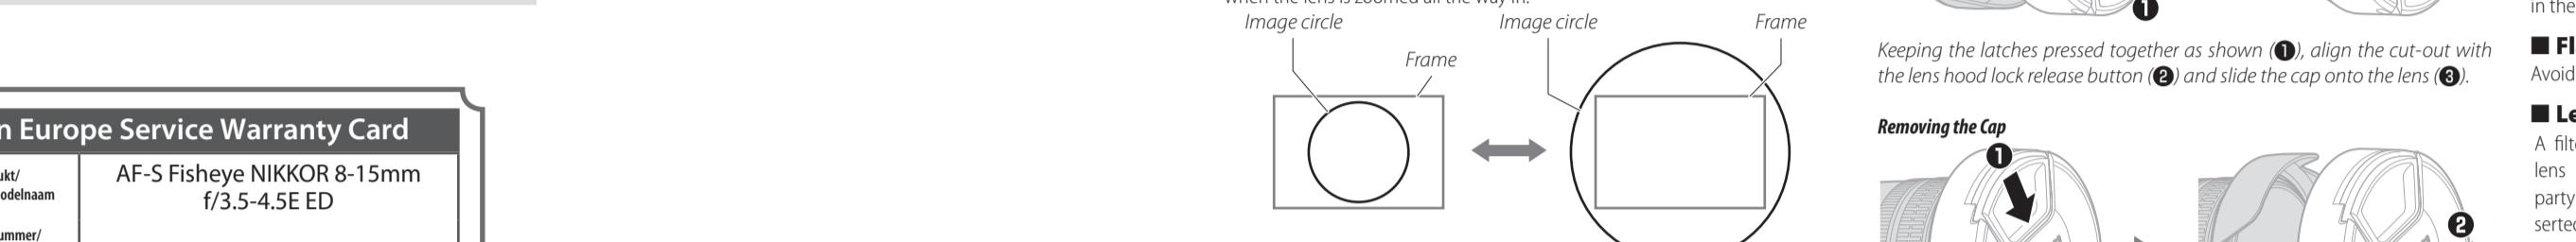

Depth of Field

Depth of field can be previewed using the camera's depth-of-field preview feature. Note that the focus distance indicator is intended only as a guide and may not accurately show the distance to the subject and may, due to depth of field or other factors, not show → when the camera is focused on a distant object.

Aperture

Aperture is adjusted using camera controls. The frame rate may drop at some apertures.

Exposure

The camera's autoexposure system is unaffected by vignetting due to the circular fisheye effect or other causes, but we recommend that you check the results in the monitor after shooting.

Flash Photography

Avoid using a flash, as it will not cover the lens's angle of view.

Lens Filters

A filter slot is located in the lens mount opening. Third-party filter sheets can be inserted after being cut to the dimensions shown. Insertion is easier when the zoom ring is rotated to the maximum zoom position.



For Your Safety

To prevent damage to property or injury to yourself or to others, read "For Your Safety" before using this product.

Keep these safety instructions where all those who use this product will read them.

WARNING: Failure to observe the precautions marked with this icon could result in death or severe injury.

CAUTION: Failure to observe the precautions marked with this icon could result in injury or property damage.

Focus

Supported focus modes are shown in the following table (for information on camera focus modes, see the camera manual).

Camera focus mode	M/A	Lens focus mode
AF	Autofocus with manual override	Manual focus with electronic rangefinder
MF	Manual focus with electronic rangefinder	

M/A (Autofocus with Manual Override)

To focus using autofocus with manual override (M/A):

- ① Slide the lens focus-mode switch to M/A.
- ② Focus.

If desired, autofocus can be instantly over-ridden by rotating the lens focus ring while the shutter-release button is pressed halfway (or, if the camera is equipped with an AF-ON button, while the AF-ON button is pressed). To refocus using autofocus, press the shutter-release button halfway or press the AF-ON button again.

A Note on Wide- and Super Wide-Angle Lenses

To focus using autofocus with manual override (M/A):

① Slide the lens focus-mode switch to M/A.

② Focus.

If desired, autofocus can be instantly over-ridden by rotating the lens focus ring while the shutter-release button is pressed halfway (or, if the camera is equipped with an AF-ON button, while the AF-ON button is pressed). To refocus using autofocus, press the shutter-release button halfway or press the AF-ON button again.

Lens Care

The lens returns to maximum aperture when removed from the camera. To protect the interior of the lens, store it out of direct sunlight or replace the lens caps. Do not clean the lens or camera using only the rect of the lens hood.

Keep the rubber lens-mount gasket dry.

Should the rubber lens-mount gasket be damaged, cease use immediately and take the lens to a Nikon-authorized service center for repair.

• Keep dry.

• Do not handle with wet hands.

Failure to observe these precautions could result in fire or electric shock.

• Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.

Failure to observe this precaution could result in explosion or fire.

• Do not directly view the sun or other bright light source through the lens or camera.

Failure to observe this precaution could result in visual impairment.

Product in the Background

Observe the following when using the product in the background:

• If the subject contains many fine details: The camera may have difficulty focusing on subjects that lack contrast or appear smaller than objects in the background. For more information, see "Getting Good Results with Autofocus" in the camera manual.

Focus

Zoom is adjusted using the zoom ring. Unlike most zoom lenses, adjusting zoom changes not only the focal length but also the size of image circle. Zooming out to 8 mm produces a circular fisheye effect, while zooming in to 15 mm produces a full-frame fisheye effect with a diagonal angle of view of 175° (for a full-frame fisheye with a diagonal angle of view of 180°, zoom out slightly from the maximum zoom position). Adjust zoom before focusing.

Supplied Accessories

LC-1102 Slip-on Front Lens Cap

HF-4 Rear Lens Cap

HB-80 Bayonet Hood

CL-1218 Lens Case

Compatible Accessories

Trimming filter sheets

Specifications

Type

Type E AF-S lens with built-in CPU and F-Mount

Focal length

8–15 mm

Maximum aperture

f/3.5–4.5

Lens construction

15 elements in 13 groups (including 3 ED elements, 2 aspherical elements, and elements with Nano-Crystal or fluorine coatings)

Angle of view

Nikon FX-format D-SLR cameras: 180° 00' – 175° 00'

Nikon DX-format D-SLR cameras: 180° 00' – 110° 00'

Mapping function

Graduated in millimeters (8, 10, 12, 14, 15) with DX mark at approximately 11 mm

Zoom

Manual zoom using independent zoom ring

Focusing

Nikon Internal Focusing (IF) System with autofocus controlled by Silent Wave Motor and separate focus ring for manual focus

Focus distance indicator

0.16 m → ∞

Minimum focus distance

0.16 m (0.5 ft) from focal plane at all zoom positions

Diaphragm blades

7 (rounded diaphragm opening)

Diaphragm

Automatic electronic diaphragm control

Aperture range

8–15 mm (f/3.5–4.5)

Filter slot

Located at rear of lens

Dimensions

Approx. 77.5 mm maximum diameter × 83.0 mm (distance from lens mount flange)

Weight

Approx. 485 g (1 lb 2 oz)

Framing

Framing shots require more care than normal.

Not only do fisheye lenses amplify the effects of perspective, but their unusual projection distortion that warps and exaggerates size and shape such that moving the camera even slightly results in an entirely different picture. The wide angle also means that care may be required to keep the photographer's arms and legs or the legs of the tripod out of the frame. We recommend that you use live view when framing photographs.

Detaching the Hood

Press the lens hood lock release button ①, rotate the hood in the direction shown by the arrow ②, and remove it as shown ③.

Attaching the Hood

Align the lens hood mounting mark ① with the lens hood alignment mark ④ and then rotate the hood ② until the ④ mark is aligned with the lens hood lock mark ③.

When attaching or removing the hood, hold it near the ④ symbol on its base and avoid gripping it too tightly.

The hood must be mounted on the lens before the cap can be attached, but once the cap is in place, the hood can be attached or removed without removing the cap.

Detaching the Hood

Release the lens hood lock release button ①, rotate the hood in the direction shown by the arrow ②, and remove it as shown ③.

Attaching the Hood

Align the lens hood mounting mark ① with the lens hood alignment mark ④ and then rotate the hood ② until the ④ mark is aligned with the lens hood lock mark ③.

When attaching or removing the hood, hold it near the ④ symbol on its base and avoid gripping it too tightly.

The hood must be mounted on the lens before the cap can be attached, but once the cap is in place, the hood can be attached or removed without removing the cap.

Detaching the Hood

Release the lens hood lock release button ①, rotate the hood in the direction shown by the arrow ②, and remove it as shown ③.

Attaching the Hood

Align the lens hood mounting mark ① with the lens hood alignment mark ④ and then rotate the hood ② until the ④ mark is aligned with the lens hood lock mark ③.

When attaching or removing the hood, hold it near the ④ symbol on its base and avoid gripping it too tightly.

The hood must be mounted on the lens before the cap can be attached, but once the cap is in place, the hood can be attached or removed without removing the cap.

Detaching the Hood

Release the lens hood lock release button ①, rotate the hood in the direction shown by the arrow ②, and remove it as shown ③.

Attaching the Hood

Align the lens hood mounting mark ① with the lens hood alignment mark ④ and then rotate the hood ② until the ④ mark is aligned with the lens hood lock mark ③.

When attaching or removing the hood, hold it near the ④ symbol on its base and avoid gripping it too tightly.

The hood must be mounted on the lens before the cap can be attached, but once the cap is in place, the hood can be attached or removed without removing the cap.

Detaching the Hood

Release the lens hood lock release button ①, rotate the hood in the direction shown by the arrow ②, and remove it as shown ③.

Attaching the Hood

Align the lens hood mounting mark ① with the lens hood alignment mark ④ and then rotate the hood ② until the ④ mark is aligned with the lens hood lock mark ③.

When attaching or removing the hood, hold it near the ④ symbol on its base and avoid gripping it too tightly.

The hood must be mounted on the lens before the cap can be attached, but once the cap is in place, the hood can be attached or removed without removing the cap.

Detaching the Hood

Release the lens hood lock release button ①, rotate the hood in the direction shown by the arrow ②, and remove it as shown ③.

Attaching the Hood

Align the lens hood mounting mark ① with the lens hood alignment mark ④ and then rotate the hood ② until the ④ mark is aligned with the lens hood lock mark ③.

When attaching or removing the hood, hold it near the ④ symbol on its base and avoid gripping it too tightly.

The hood must be mounted on the lens before the cap can be attached, but once the cap is in place, the hood can be attached or removed without removing the cap.

Detaching the Hood

Release the lens hood lock release button ①, rotate the hood in the direction shown by the arrow ②, and remove it as shown ③.

Attaching the Hood


Align the lens hood mounting mark ① with the lens hood alignment mark ④ and then rotate the hood ② until the ④ mark is aligned with the lens hood lock mark ③.

When attaching or removing the hood, hold it near the ④ symbol on its base and avoid gripping it too tightly.

The hood must be mounted on the lens before the cap can be attached, but once the cap is in place, the hood can be attached or removed without removing the cap.

Detaching the Hood

Release the lens hood lock release button

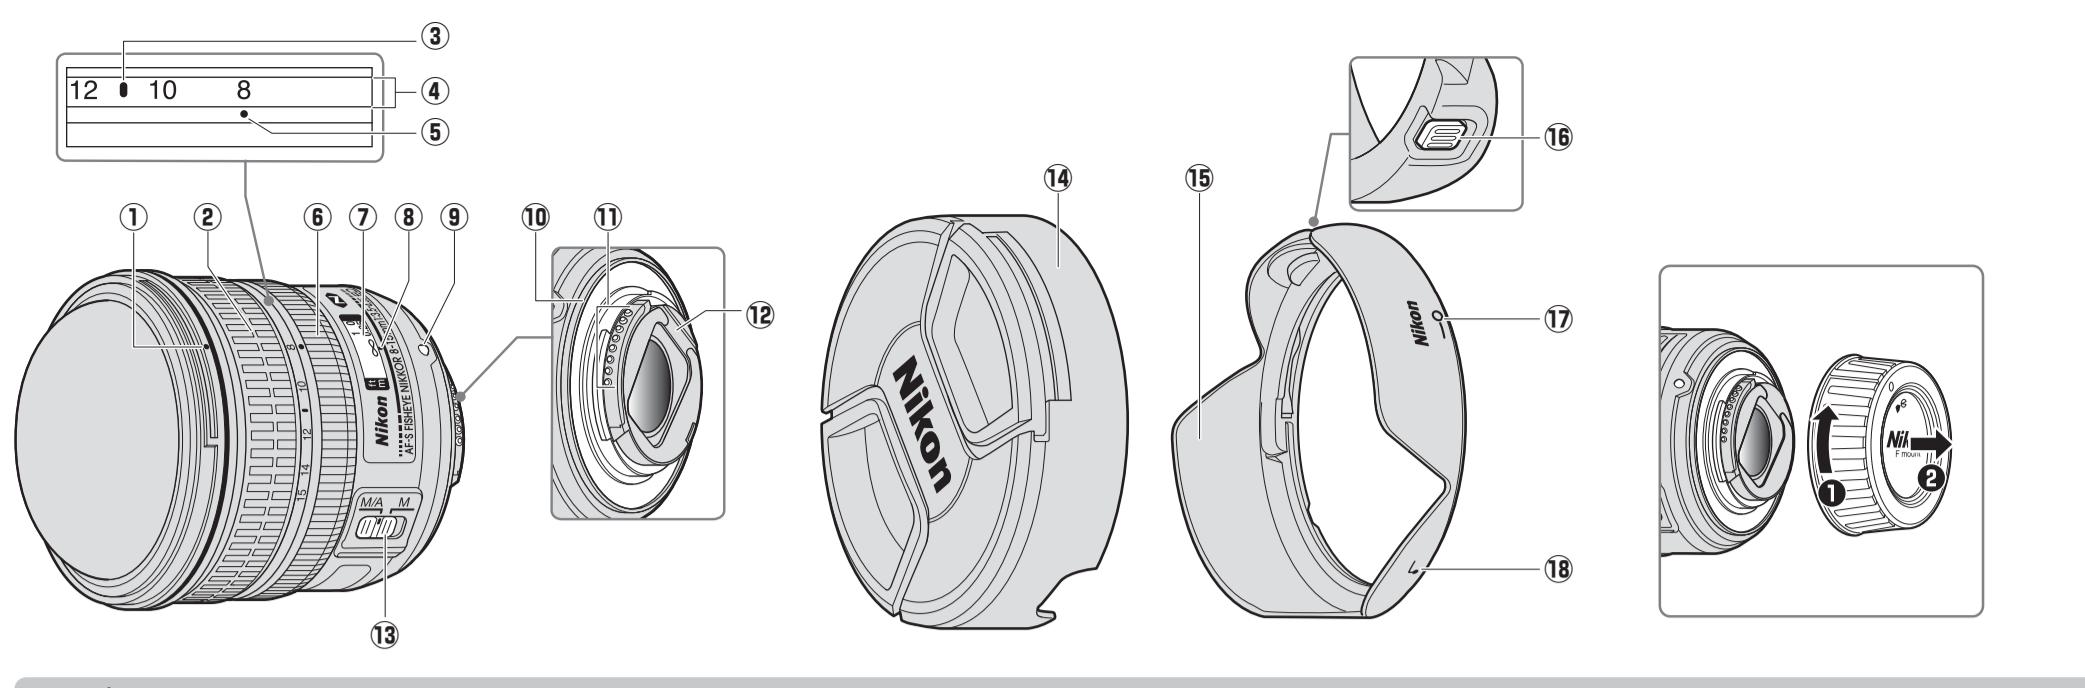

Frans


Avant d'utiliser ce produit, veuillez lire attentivement ces instructions et le manuel de l'appareil photo.

Remarque : cet objectif n'est pas compatible avec les reflex argentiques ou avec les reflex numériques de gamme D2, gamme D1, D200, D100, D90, D80, gamme D70, D60, D50, gamme D40 ou D300.

■ Principales fonctionnalités

Cet objectif fisheye est destiné exclusivement aux appareils photo permettant le contrôle électronique de l'ouverture. Sur un appareil photo de format FX, son angle de champ est de 180° à la verticale et à l'horizontale (fisheye circulaire) et en cas de zoom, il passe de 180° en diagonal (fisheye diagonal offrant une image rectangulaire) en cas de zoom avant quasi maximal. Il restitue la perspective selon une projection équivalente.

Le plus petit cercle image obtenu lors d'un zoom arrière maximal et le plus grand lors d'un zoom avant maximal.

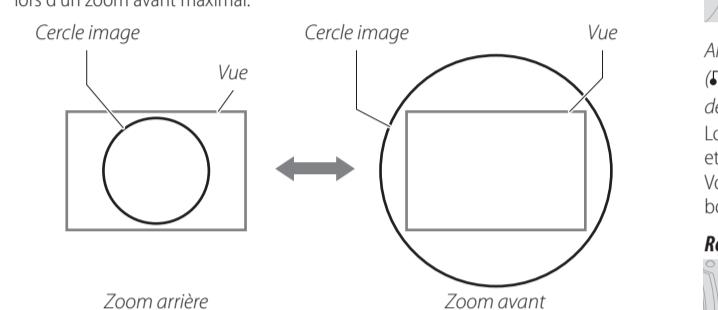

Il est possible que le cercle image (et tout vignettage dans les coins) ne soit pas toujours aligné sur le centre de la vue.

■ Pour votre sécurité

Afin d'éviter de provoquer des dommages matériels ou de vous blesser ou de blesser des tiers, lisez intégralement « Pour votre sécurité » avant d'utiliser ce produit.

Conservez ces consignes de sécurité dans un endroit facilement accessible à tous ceux qui pourraient se servir de ce produit.

AVERTISSEMENT : le non-respect des consignes indiquées par cette icône peut vous exposer à un danger de mort ou à de graves blessures.

ATTENTION : le non-respect des consignes indiquées par cette icône peut vous exposer à des blessures ou provoquer des dommages matériels.

AVERTISSEMENT
• Ne démontez pas ou ne modifiez pas ce produit.
• Ne touchez pas les composants internes qui sont exposés suite à une chute ou à un autre accident.

• Si vous observez des anomalies provenant du produit comme de la fumée, de la chaleur ou des odeurs inhabituelles, débranchez immédiatement la source d'alimentation de l'appareil photo.

Continuer d'utiliser le matériel risque de provoquer un incendie, des brûlures ou d'autres blessures.

Gardez l'appareil au sec.
• Ne laissez pas l'appareil avec les mains mouillées.

Le non-respect de ces consignes peut provoquer un incendie ou un choc électrique.

N'utilisez pas ce produit en présence de poussières ou de gaz inflammables comme du propane, de l'essence ou des aérosols.

Le non-respect de cette consigne peut provoquer une explosion ou un incendie.

Observez pas directement le soleil ou autre source lumineuse puissante à travers l'objectif ou l'appareil photo.

Le non-respect de cette consigne peut provoquer des troubles visuels.

Conservez ce produit hors de portée des enfants.

Le non-respect de cette consigne peut provoquer des blessures ou le dysfonctionnement du produit. En outre, notez que les petites pièces présentent un risque d'étouffement. Si jamais un enfant avalait une pièce de ce produit, consultez immédiatement un médecin.

Ne manipulez pas le matériel à mains nues dans des lieux exposés à des températures extrêmement basses ou élevées.

Le non-respect de cette consigne peut provoquer des brûlures ou des engelures.

ATTENTION

• Ne pointez pas l'objectif direction du soleil ou autres sources très lumineuses. La lumière focalisée par l'objectif est une source d'incendie et peut endommager les composants internes du produit.

• Ne laissez pas le produit exposé à des températures excessives, chaudes pendant une période prolongée, comme dans une voiture fermée ou en plein soleil.

Le non-respect de cette consigne peut provoquer un incendie ou le dysfonctionnement du produit.

■ Avis pour les clients en Europe

Ce symbole indique que le matériel électrique et électronique doit être jeté dans les déchets appropriés.

Les normes suivantes s'appliquent uniquement aux utilisateurs situés dans les pays européens.

• Ce produit doit être jeté dans un point de collecte approprié. Il ne doit pas être jeté avec les déchets ménagers.

• Le tri sélectif et le recyclage permettent de préserver les ressources naturelles et d'éviter les conséquences néfastes pour la santé humaine et l'environnement, qui peuvent être provoquées par une élimination incorrecte.

• Pour plus d'informations, contactez votre revendeur ou les autorités locales chargées de la gestion des déchets.

■ Avis pour les clients en France

FR Cet appareil se recycle

À déposer EN MAGASIN ou À DÉPOSER EN DÉCHETTERIE

Points de collecte sur www.qualitedemedechets.fr

Privilégiez la réparation ou le don de votre appareil.

■ Parties de l'objectif

① Repère de montage du parasoleil

② Bague de zoom

③ Repère de mise au point

④ Echelle des focales

⑤ Repère de la focale

⑥ Repère de mise au point

⑦ Indicateur de distance de mise au point

⑧ Repère de distance de mise au point

⑨ Repère de montage de l'objectif

⑩ Repère de la monture de l'objectif

⑪ Joint en caoutchouc de la monture de l'objectif

⑫ Repère de la monture du microprisme

⑬ Lögning pour filtre

⑭ Commutateur du mode de mise au point

⑮ Bouchon d'objectif

⑯ Bouchon de déverrouillage du parasoleil

⑰ Repère d'alignement du parasoleil

⑱ Repère de la monture de l'objectif

⑲ Repère de la monture de l'objectif

⑳ Repère